

ARTNET Web Configuration

www.colordreamer.com

All Rights Reserved Copyright Colordreamer Technology Co.,Ltd 2015



Step1

Connect artnet controller and your computer to the same network

| Artnet controller default IP is |
|---|
| 192.168.1.100 |
| User need to set your computer IP to be |
| 192.168.1.XXX |
| Subnet Mask:255.255.255.0 |

| 如果网络支持此功能,则可以获j | 取自动指派的 IP 设罟。否则, |
|---|---------------------|
| 影需要从网络系统管理员处获得 | 适当的 IP 设置。 |
| ◎ 白动萍得 TP 地址(0) | |
| ◎ 使用下面的 IP 地址(S): | |
| IP 地址(I): | 192 . 168 . 1 . 5 |
| 子网掩码(0): | 255 . 255 . 255 . 0 |
| 默认网关(0): | 10 KO 10 |
| A 白动标泪 nuc 肥久照如此 | ומ |
| ● 自动获得 DMS 服务器地址(-◎ 使用下面的 DMS 服务器地址 | h(E): |
| 首选 DNS 服务器 (P): | |
| 备用 DNS 服务器(A): | |
| | |



Step2

Open your web browser and enter the IP address 192.168.1.100 Web configuration interface will be launched. Click "Device Configuration"





Step3:

User can change IP address and save this configuration

"Change" IP Address Click "Save"

Titan





Step4:

After saving all setting, reboot the system to apply the new setting

Reboot

After reboot, this window will be closely automatically

Titan



For more information visit www.colordreamer.com